

Gadhouse

miko

User Manual

Gadhouse MIKO cassette player

Thank you for choosing
MIKO Cassette Player.

To ensure years of reliable performance,
please read this manual carefully and keep it
for future reference.

WARNING!

Before using your cassette player for the first time, please read these instructions carefully.


- MIKO Cassette Player is designed for indoor, home use only. It is not suitable for commercial applications.
- This unit contains no user-serviceable parts. Repairs should only be carried out by qualified personnel. Incorrect repairs may cause damage or risk of injury and will void the warranty.
- Do not operate the unit if it has been dropped, damaged, or shows signs of malfunction.
- Do not expose the player to dripping or splashing liquids.
- Do not place heavy objects or containers with liquids on top of the player.
- Avoid placing the player near heat sources, in direct sunlight, or in areas with excessive dust, sand, or humidity.



- Never insert foreign objects into any openings on the player.
- This product is not a toy. Children should be supervised and must be over 8 years of age to use it safely.

User manual

- 1.Parts and Controls
2. How to operate
- 3.Care & Maintenance
4. Warranty Terms & Conditions.

1. Parts and Controls

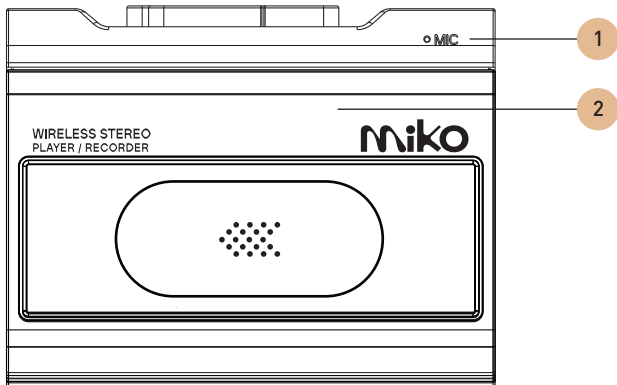

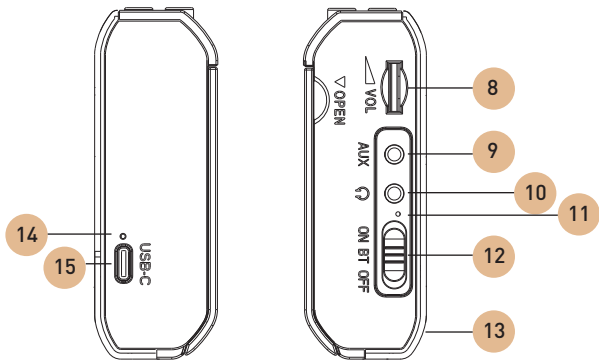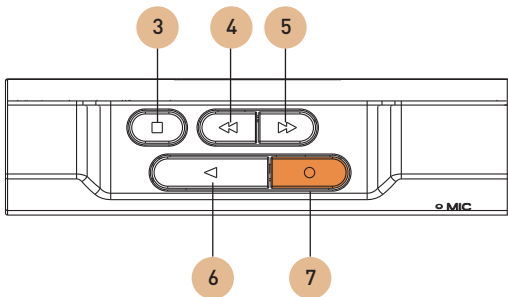

1. Mic
2. Cassette Door
3. Stop Button
4. Fast Forward Button
5. Fast Backward Button
6. Play Button
7. Recording Button
8. Volume Control Knob
9. AUX Jack
10. Headphone Jack
11. Bluetooth LED Indicator
12. Bluetooth On/Off Switch
13. Battery Door
14. Power LED Indicator
15. USB C Jack

2. How to operate

Powering Your Cassette Player

MIKO Cassette Player operates on two AA (UM-3) batteries or via USB-C power.

Using Batteries (Not Included)

1. Slide and open the battery door on the back of the player.
2. Check the polarity marks (+/-) inside the compartment.
3. Insert two AA batteries according to the polarity.
4. Close the battery door securely.

For best performance and longer playtime, we recommend using alkaline batteries.

Using USB ADAPTOR OPERATION

1. Connect a USB-C cable to the USB-C port (15).
2. Use only a 5V power adapter.

IMPOTANT:


1. Always install batteries correctly. Incorrect polarity may damage the unit.
2. Do not mix old and new batteries or different battery types.
3. Remove batteries if the player will not be used for a long period. Leaking batteries can cause damage.
4. Do not dispose of batteries in fire — they may explode.

Playing a cassette tape

1. Plug your headphones into the headphone jack (10).
2. Put on your headphones.
3. Open the cassette door (2) and insert a tape with the exposed tape facing up.
4. Close the door.
5. Press PLAY (6).
6. Adjust the Volume Control (8) to the desired level.
7. Use FAST FORWARD (4) or REWIND (5) as needed.
8. Press STOP (3) to end playback.

Recording

1. Open the cassette door and insert a blank cassette tape.

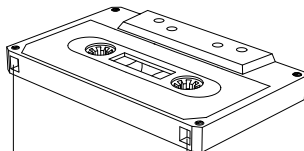

2. Ensure both sides (A/B) have the recording tabs intact.
3. Close the cassette door and press the "REC" button (7) start to record.
4. Record through the microphone hole (1).
5. Press the "STOP" button (3) to stop the record function.
6. To listen to the recorded programme, you can press the Fast Backward Button (5) rewind to rewind the tape and press the PLAY button (6) to replay the recorded programme.
7. To prevent your recorded programme from being erased you can take out the RECORDING LIP.

Tip: You can also connect an external 3.5mm microphone to the AUX jack (9) for improved recording quality.

Using the Bluetooth Transmitter

1. Turn on your Bluetooth speaker or headphones and set them to pairing mode.
2. Slide the Bluetooth switch (12) to the ON position. The Bluetooth LED (11) will begin flashing.
3. Pairing may take up to 60 seconds.
4. Once connected, the LED will flash slowly.
5. You can now enjoy your cassette audio through your Bluetooth device.
6. Adjust the volume with the Volume Control (8).

IMPORTANT!


- Do not use the player while walking near traffic or crossing streets.
- Avoid listening at high volumes for extended periods.
- Keep volume at a moderate level to remain aware of your surroundings.
- Clean the exterior with a soft, dry cloth. Do not immerse in water.

Automatic stop

- The player includes an automatic stop mechanism to protect your tapes.
- When the tape reaches the end during playback, the PLAY button will release automatically.
- This function only works during playback. Fast forward and rewind must be stopped manually.


Cassette tape operating tips

- Avoid 120-minute (C-120) tapes. Their thinner tape is more likely to jam or stretch.
- Clean the tape head after every 10–20 hours of use for the best sound quality.
- Keep the player away from extreme heat or cold.
- If the tape has slack, remove it by inserting a pencil into the hub and gently turning clockwise.

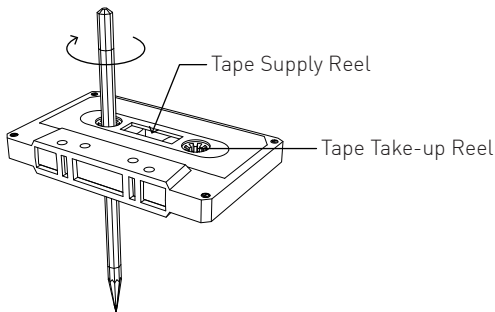

Leader tape

- The beginning of every cassette contains a short section of clear leader tape that cannot record.
- Allow the tape to run for about 5 seconds before recording.
- Always keep the tape head clean using a cotton swab with isopropyl alcohol or tape head cleaner.
- To clean, press PLAY (6) and gently wipe the tape head, capstan, and pinch roller.

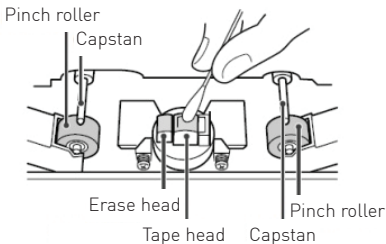

3. Care & Maintenance

- Wipe with a soft, slightly damp cloth.
- Do not use solvents such as alcohol, benzine, or thinner.
- Avoid leaving the player in direct sunlight, hot, or humid environments.
- Keep away from strong electrical noise or motors.



The crossed-out wheeled bin symbol indicates that this product must not be disposed of with regular household waste. Please recycle responsibly in accordance with local regulations.

4. Warranty Terms & Conditions

Your MIKO Cassette player comes with a 1-year limited warranty from the date of purchase. You may extend your warranty to 2 years by registering your product online. This warranty applies to the original purchaser and is valid in Thailand, Japan, the UK, the European Union, and Australia.

What is covered:

- Manufacturing defects in materials and workmanship.
- Internal component failures that result in the product not functioning as intended.


What is not covered:

- Cosmetic damage (including scratches, dents, and wear of finishes).
- Damage caused by misuse, accidents, unauthorized modifications or repairs, improper storage, or exposure to liquids.
- Loss or theft of the product.
- Use of non-approved accessories or adapters.

How to claim warranty:

1. Keep your original purchase receipt and the included warranty label with serial number at the back of the battery cover.
2. Contact our support team at Cs @gadhouse.com
3. If approved, we will repair or replace the product at our discretion.

Note: This warranty gives you specific legal rights. You may have other rights that vary by country.

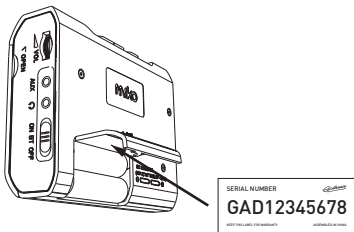

GAD SERVICE FORM